 





## STEP 1: Preparing the Camera

**1. Charge the battery pack:** Place the battery pack in the battery charger and plug the charger into a power outlet. The charge indicator lights red while charging and changes to green when the battery pack is charged. Charging the battery pack takes approximately 130 minutes.

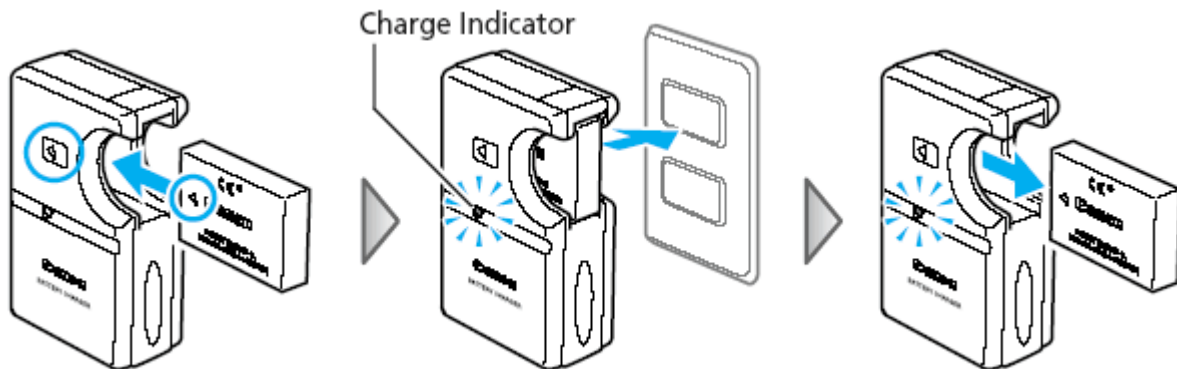


 **2. Install the battery pack:** Slide the battery cover open. Press the battery lock while inserting the battery pack all the way in, aligning the arrows on the camera and battery pack. Slide the battery cover closed.

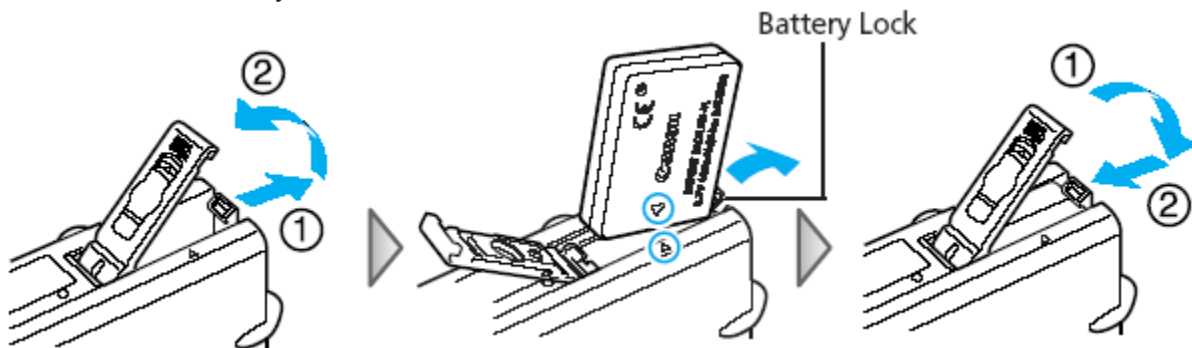


## Center for Teaching and Learning

 **3. Install the CF card:** Slide the lock and open the CF card slot cover. Insert the CF card with its label facing upward until the CF card eject button fully extends. Close the CF card slot cover.

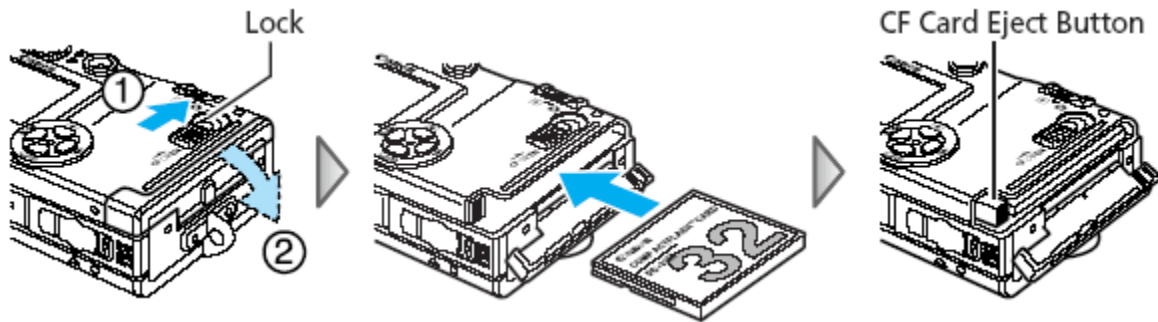

### STEP 2: Shooting

 
**1. Set the mode switch to  (Shooting) and the shooting mode dial to  (Auto).**

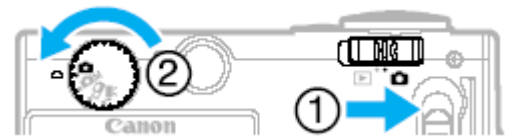

**2. Turn on the Power:** Press the ON/OFF button until the power lamp lights.



 
**3. Focus:** Point the camera in the direction of the subject you wish to shoot and press the shutter button halfway. The camera beeps twice when the subject is in focus.

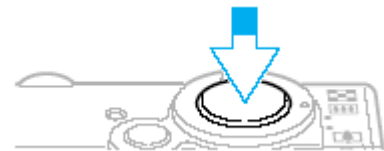



 **4. Shoot:** Press the shutter button fully. The shutter sound will sound once when the shot has been taken. The recorded image is displayed on the LCD monitor for approximately 2 seconds.

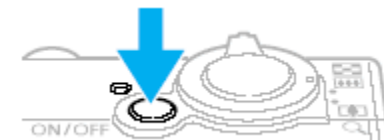



**Turn off the power:** Press the ON/OFF button. Even if the ON/OFF button is not pressed, the power will automatically shut down 3 minutes after the last control is accessed.




**STEP 3: Using the Zoom**

 **Zoom IN:** Press the zoom lever toward  to zoom in.  
**Zoom OUT:** Press the zoom lever toward  to zoom out.

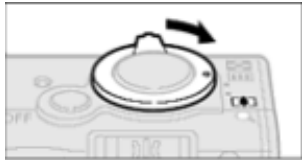




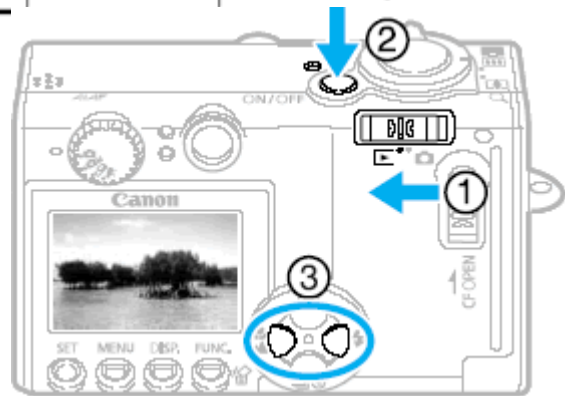 
Resolution		Purpose	
<b>L</b> (Large)	2272 x 1704 pixels	Large  Small	- Print A4 size* 210 x 297 mm (8.3 x 11.7 in.) or larger prints
<b>M1</b> (Medium 1)	1600 x 1200 pixels		- Print Letter size* 216 x 279 mm (8.5 x 11 in.) or larger prints
<b>M2</b> (Medium 2)	1024 x 768 pixels		- Print postcard size 148 x 100 mm (6 x 4 in.) prints
<b>S</b> (Small)	640 x 480 pixels		- Print L-size 119 x 89 mm (4.7 x 3.5 in.) prints
		- Print card size 86 x 54 mm (3.4 x 2.1 in.) prints - Send images as e-mail attachments - Shoot more images	

\*Paper sizes vary according to region.






Compression		Purpose	
<b>S</b> Superfine	High Quality  Normal	- Shoot higher quality images	
<b>F</b> Fine		- Shoot normal quality images	
<b>N</b> Normal		- Shoot more images	


**STEP 4: Reviewing an Image**

 1. Set the mode switch to  (Replay).
2. Turn on the power. Press the ON/OFF button until the power lamp lights. The last recorded image appears in the LCD monitor.
3. View the images. Use the   buttons to display the image you wish to see.



**To Delete an Unwanted Image**

1. Select the unwanted image with the   buttons and press the  button.
2. When the confirmation screen appears, check that [Erase] is selected and press the SET button. Select [Cancel] with the   buttons to cancel without erasing.

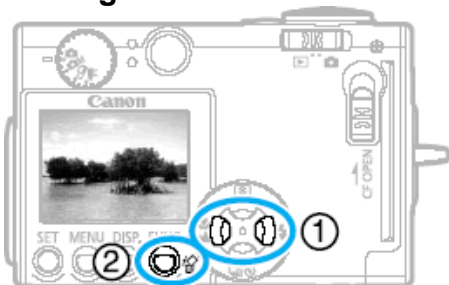



Center for Teaching and Learning

**STEP 5: Downloading Images to a computer**

  1. Connect the camera to the computer using the USB cable.

2. Set the camera's mode switch to  and turn on the power.

3. Windows XP operating system will automatically detect the camera and install the necessary drivers for it.

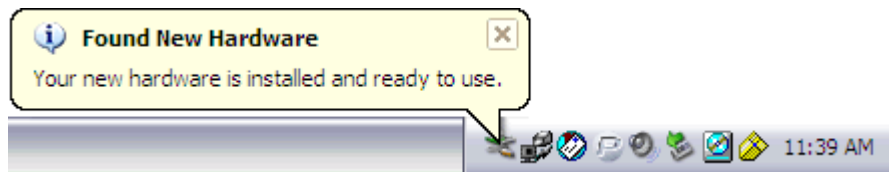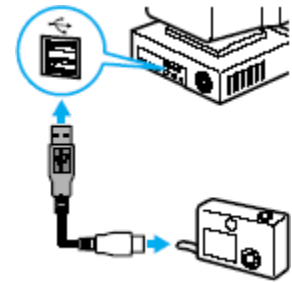


4. Double click on My Computer icon on the desktop. You will now be able to see the camera as a part of Cameras and Scanners attached to the computer.



5. Double click on Canon PowerShot S400 icon. It will allow you to view the pictures you have taken.


6. Select the pictures that you like and want to download to the computer.

 7. On the left side of the screen under File and Folder Tasks select Copy this item (if one photo selected) or Copy the selected items (if multiple photos selected).

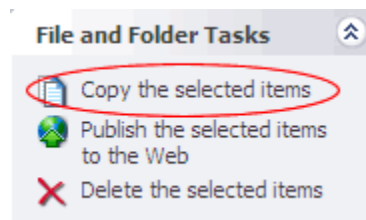


## Center for Teaching and Learning

 8. Choose a destination for your pictures and click Copy. It is recommended that you download the pictures in My Pictures folder under My Documents. The best way to do it is to create new folders (and don't forget to name the folder) for each event.

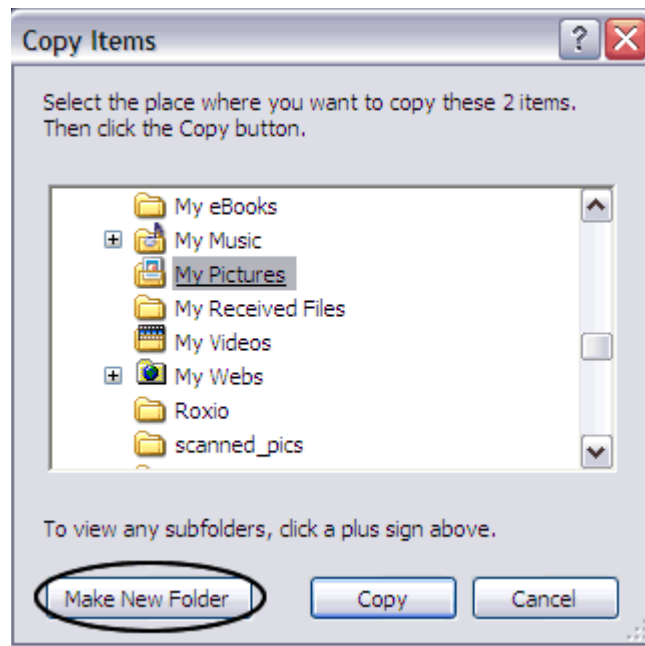

 9. The computer will copy the images you have selected to the destination folder.

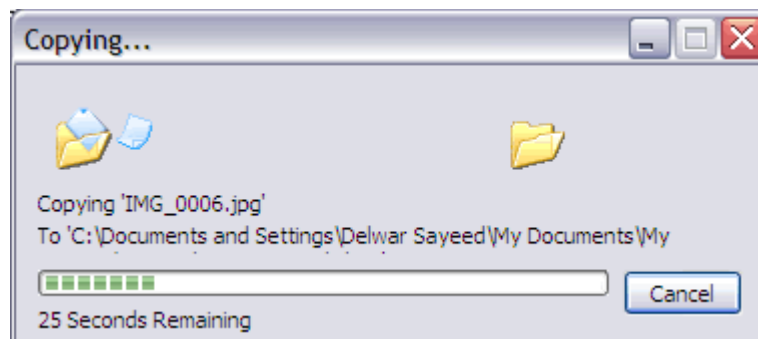


10. Open My Pictures (or the folder you chose) folder and any sub folders that you chose for your pictures. Your pictures will be there.

You are done! Hooray! 😊

# Center for Teaching and Learning
 
## Front View

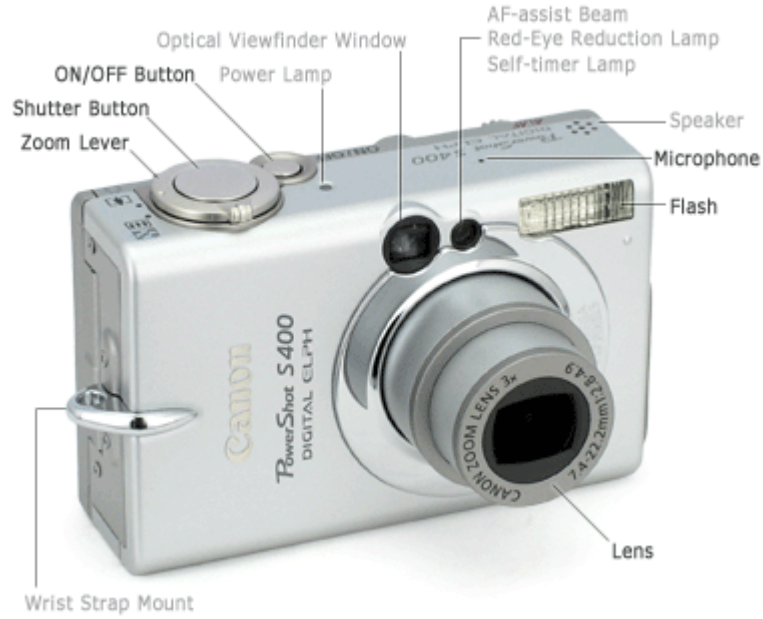

## Rear View

